


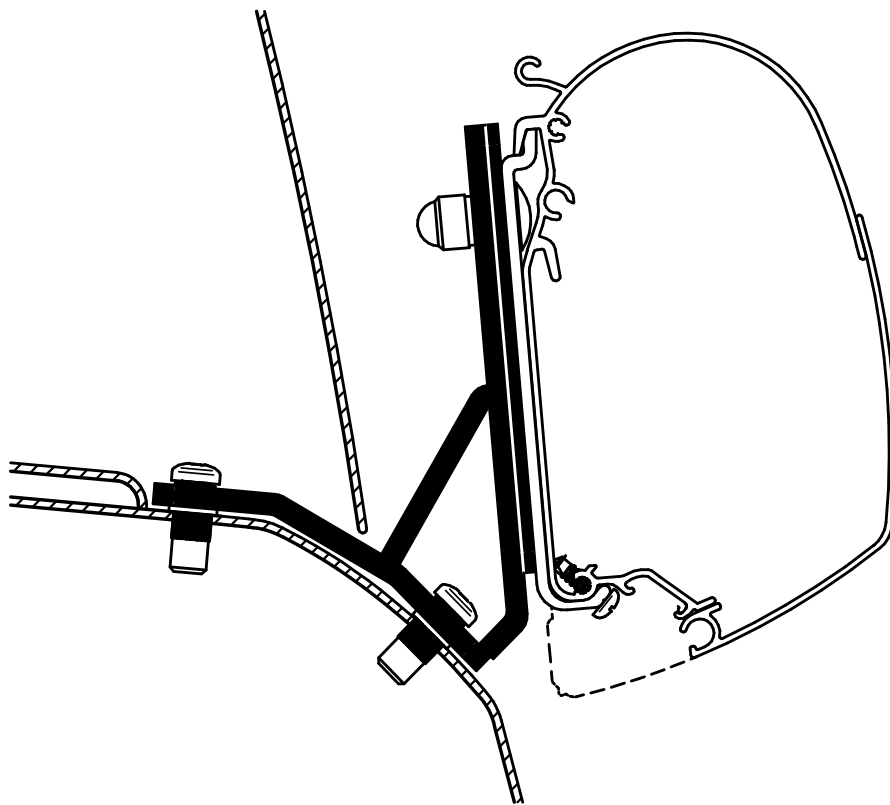

Adapter Wall Ducato / Iveco H2 Lift Roof

> Instructions







308960


AD960-02 | 3380028600

2019-05-20

Bring your life
thule.com

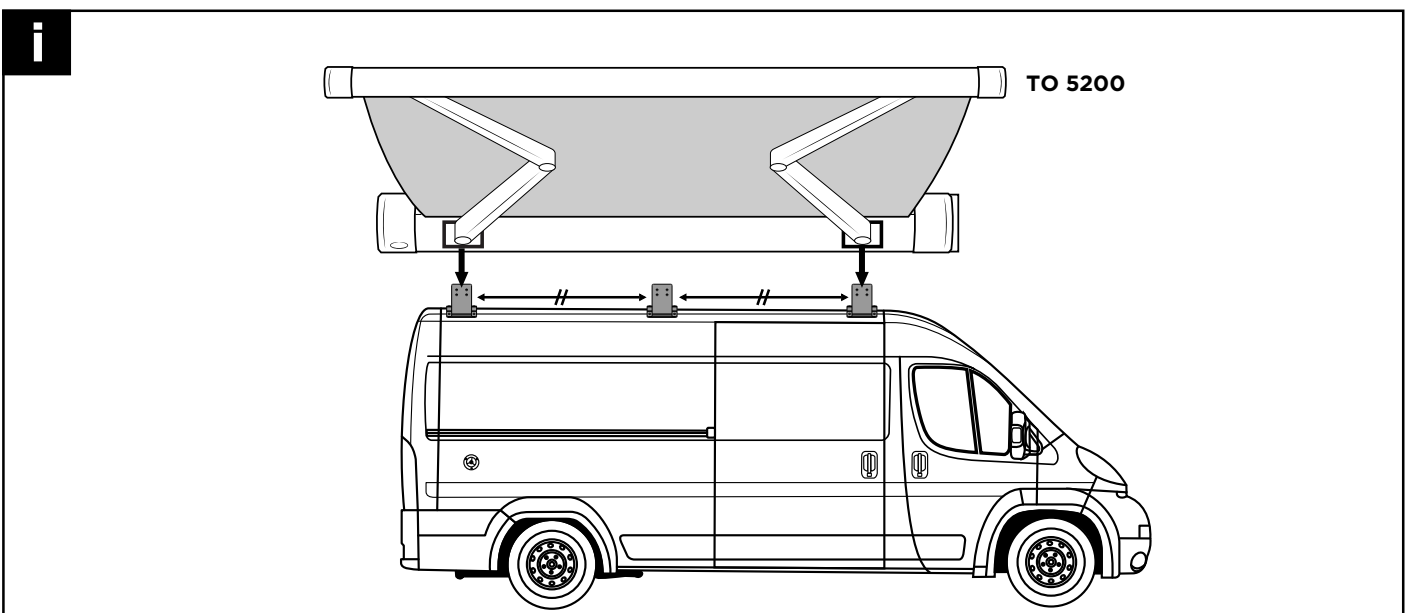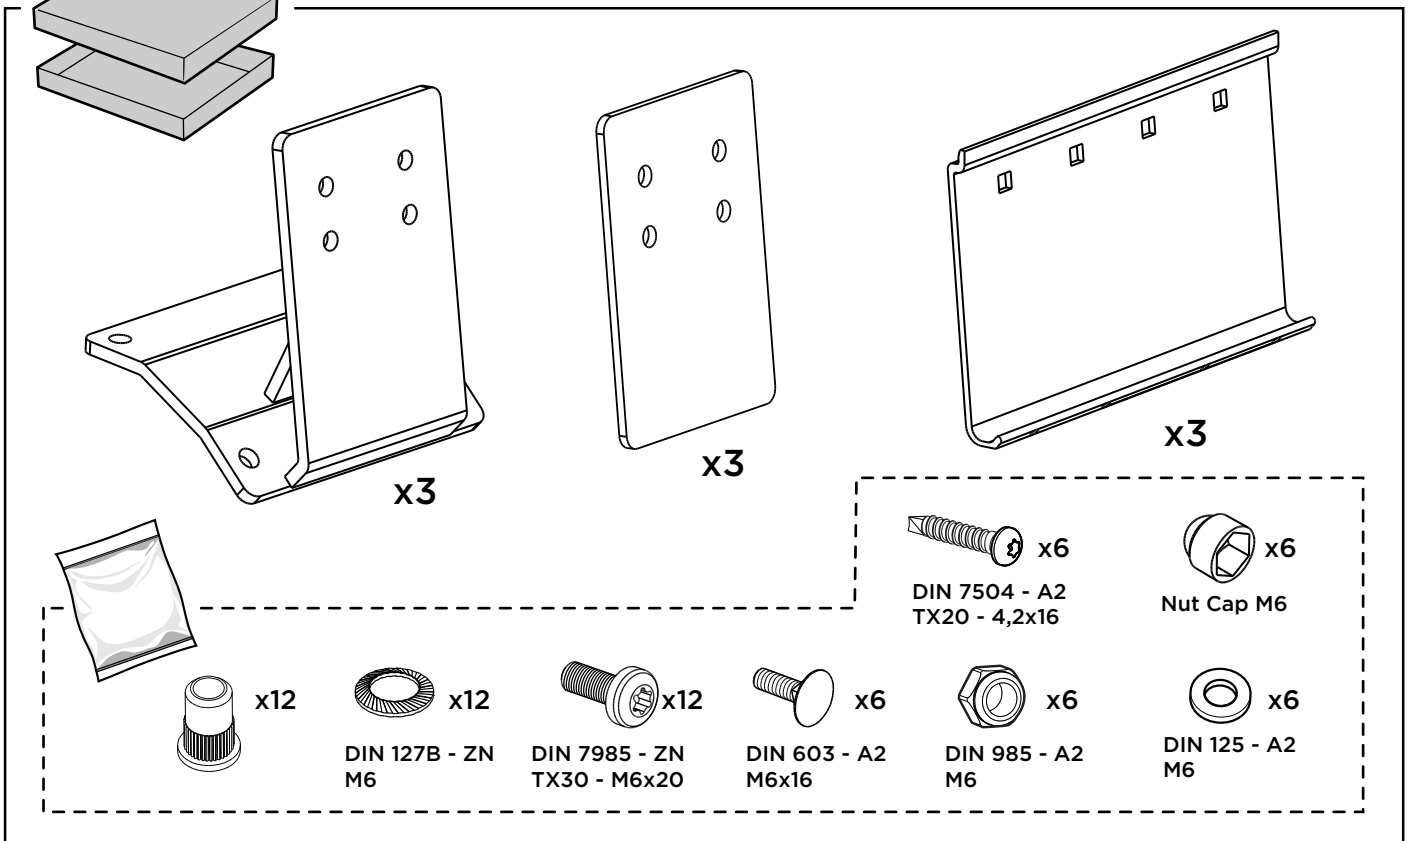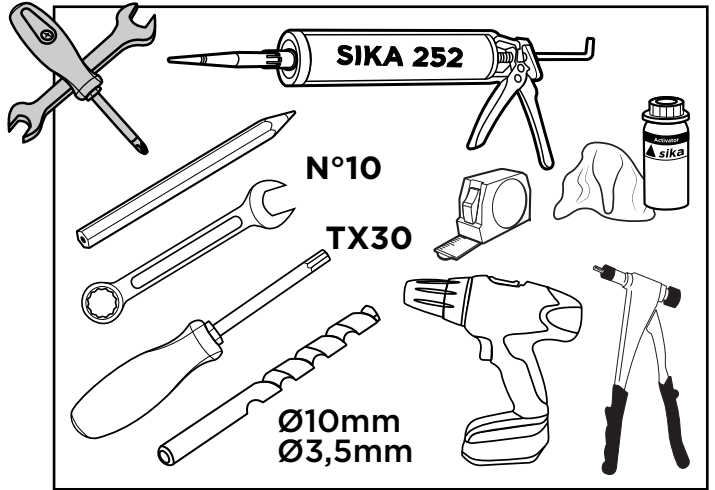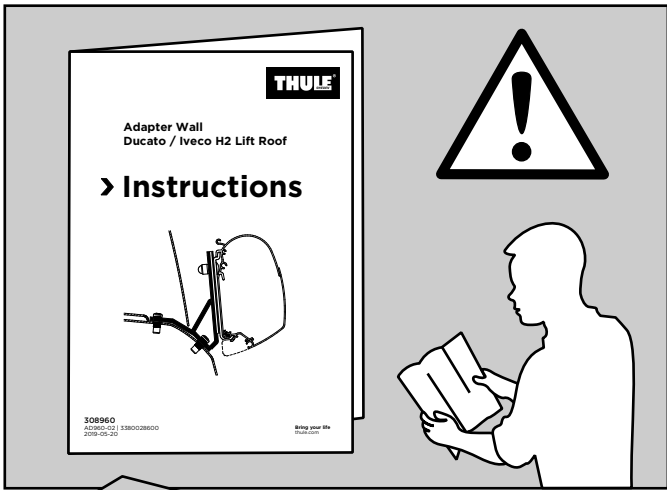


1

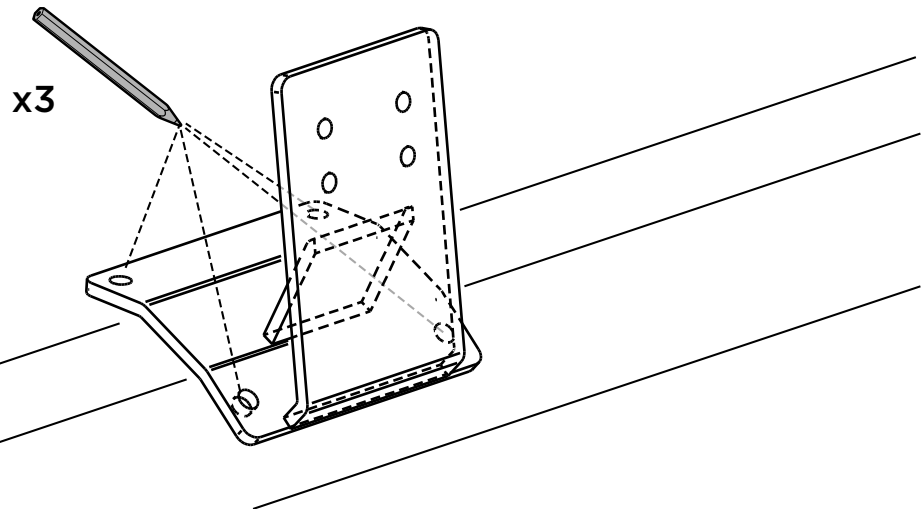


2

A


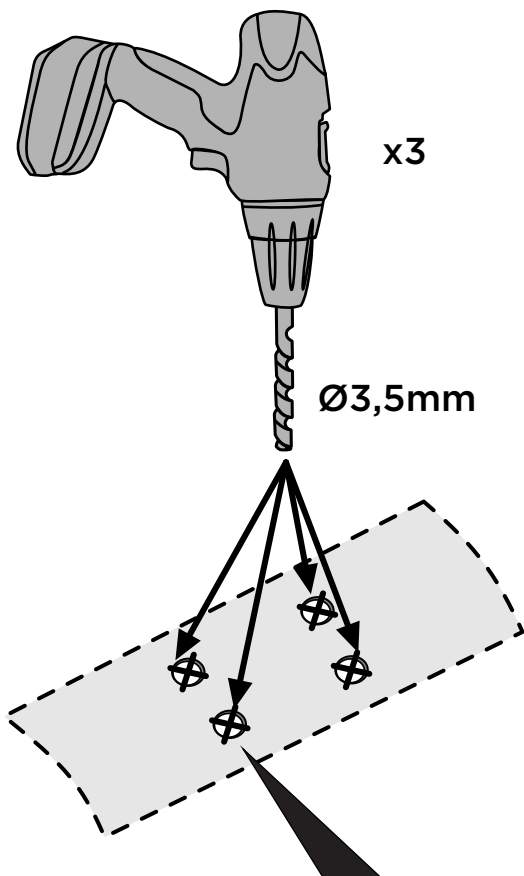


B

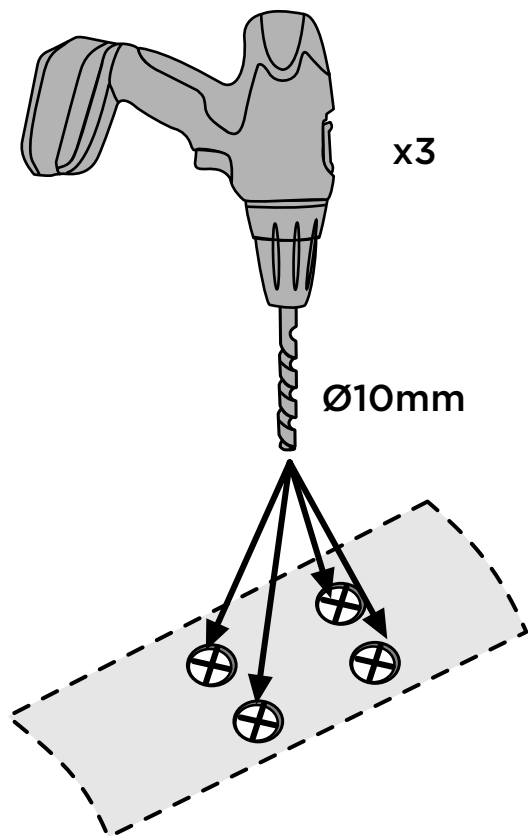



Thule recommends / beveelt aan / empfiehlt / recommande:
**Zinc spray surface treatment / Zink spray oppervlakte behandeling /
Zinkspray oberflächenbehandlung / traitement de surface avec pulvérisation de zinc**

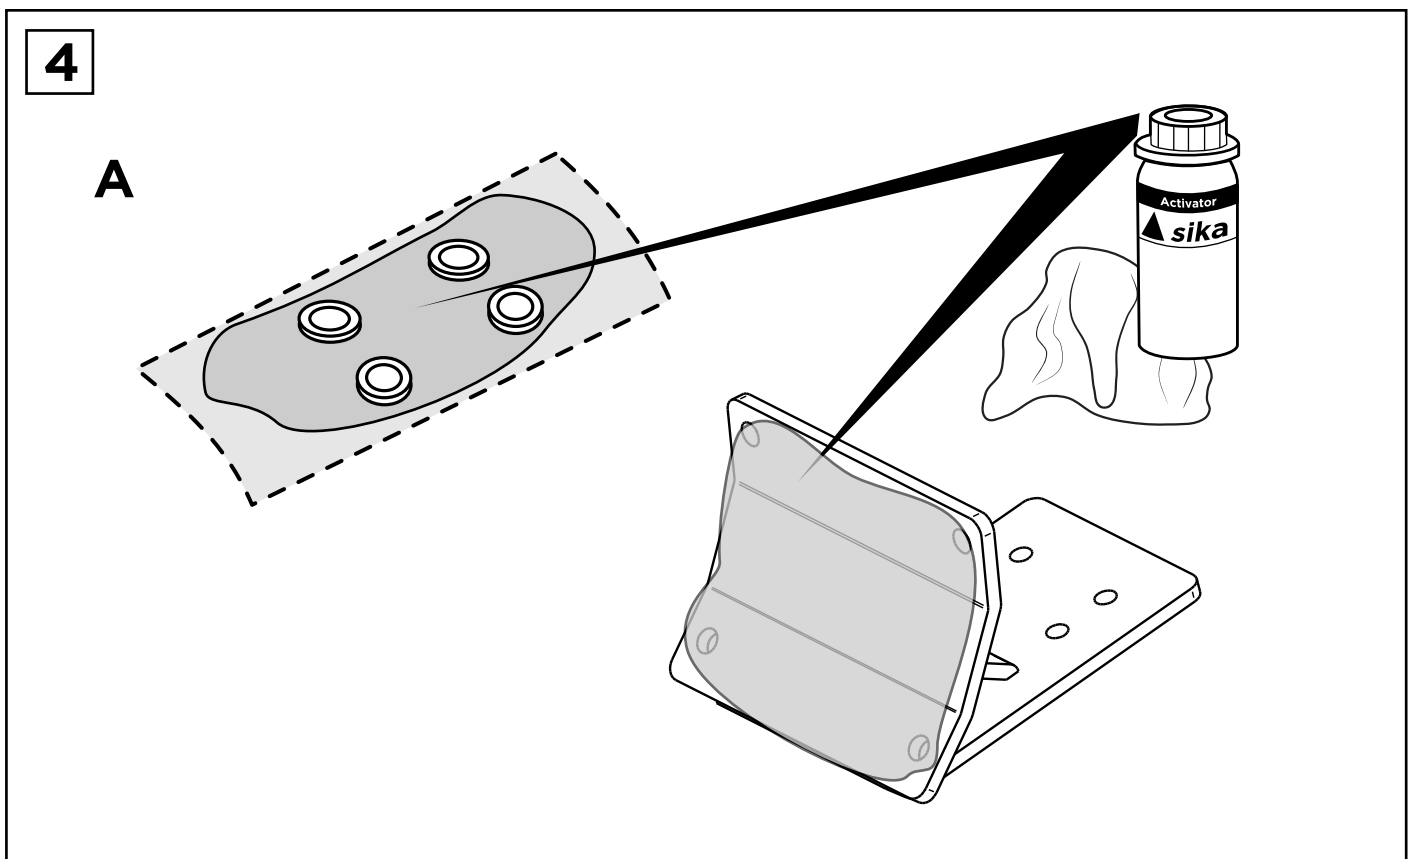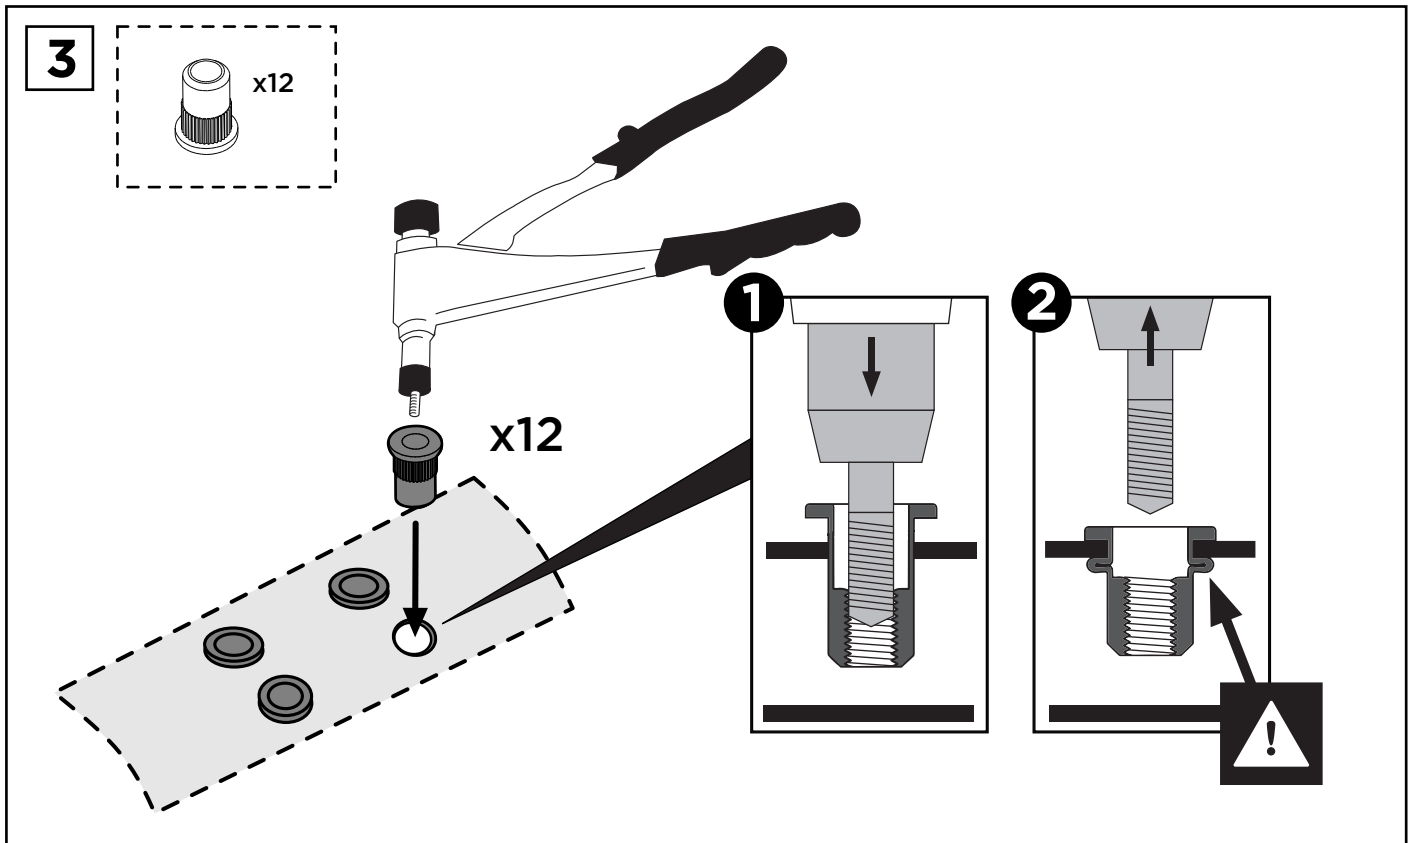Preparation according to the prescripts of the supplier.
Voorbehandeling volgens de voorschriften van de fabrikant.
Primern nach Anweisung des Hersteller.
Pour la préparation, suivre les prescriptions du fournisseur.




Glue / Lijmen / Verklebung / Coller:
 Thule recommends / beveelt aan / empfiehlt / recommande:
SIKA 252 or Terostat MS937

Preparation and sealing according to the prescripts of the glue supplier.
 Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.
 Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.
 Procédure d'installation suivant les prescriptions indiquées sur l'emballage du produit.

48 h

B

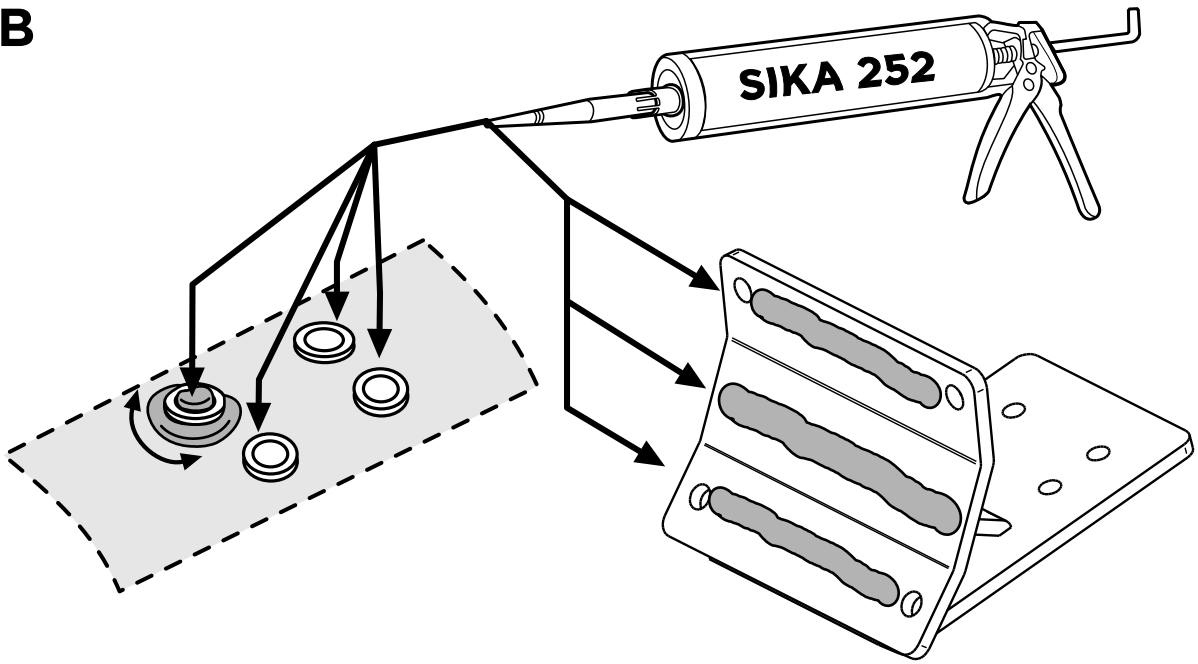


5



DIN 127B - ZN
M6

DIN 7985 - ZN
TX30 - M6x20

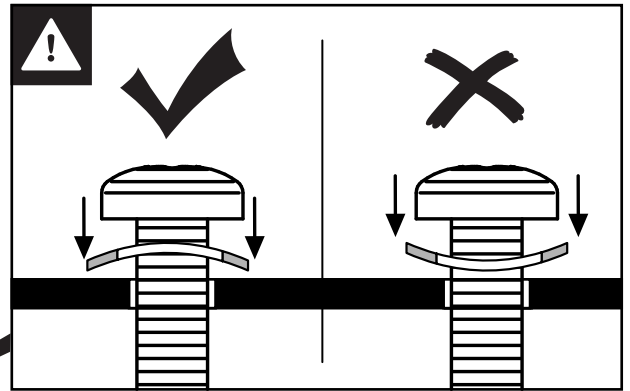


TX30



x12




6 Nm

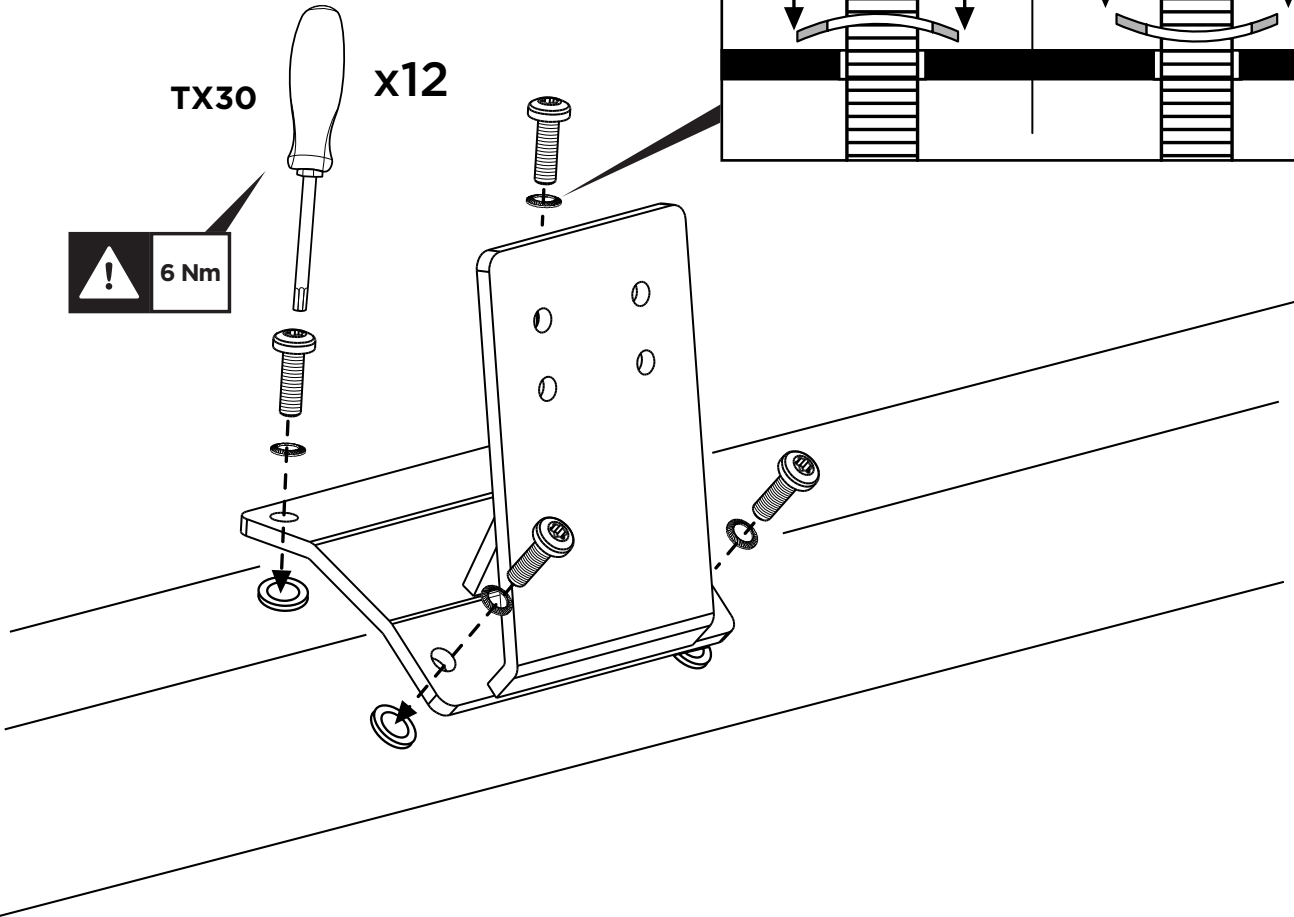

6

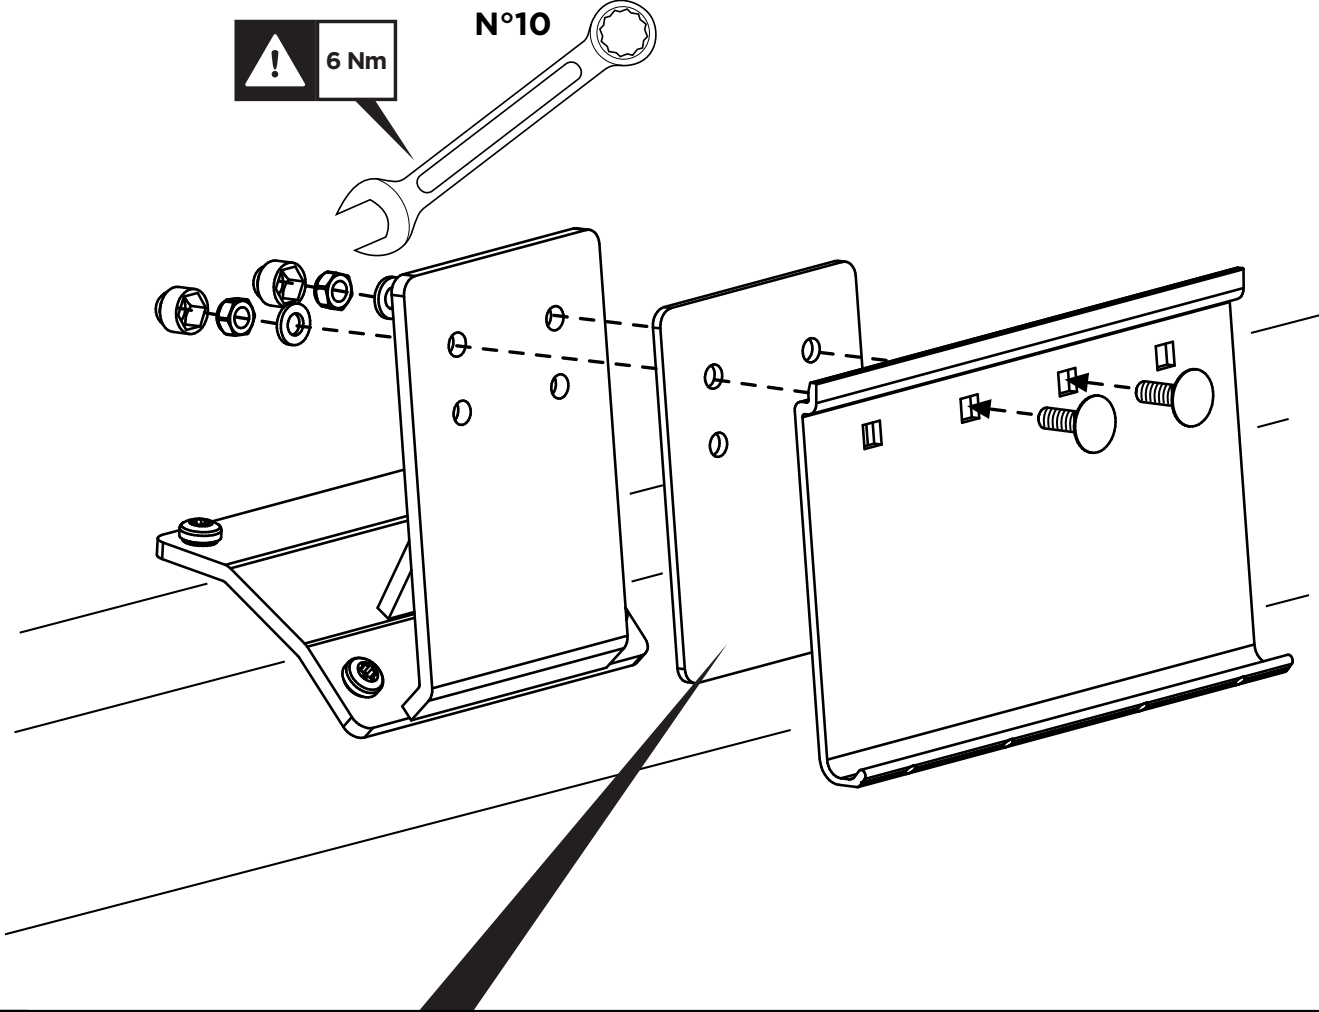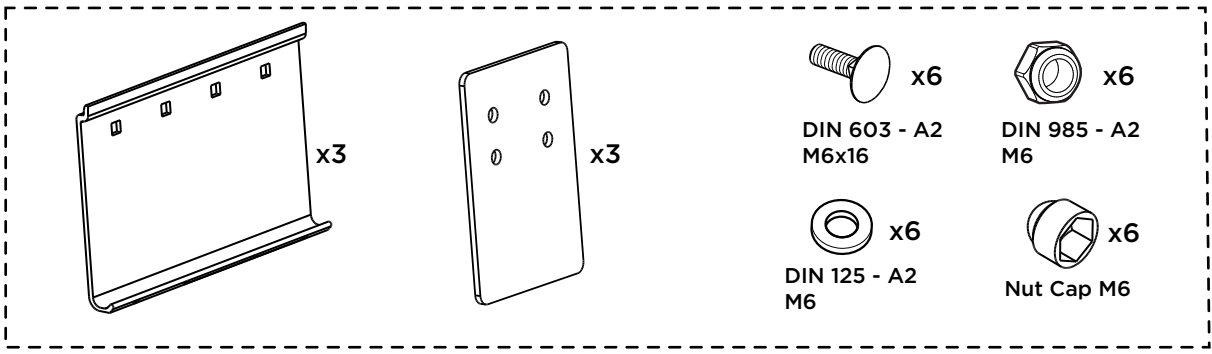


i

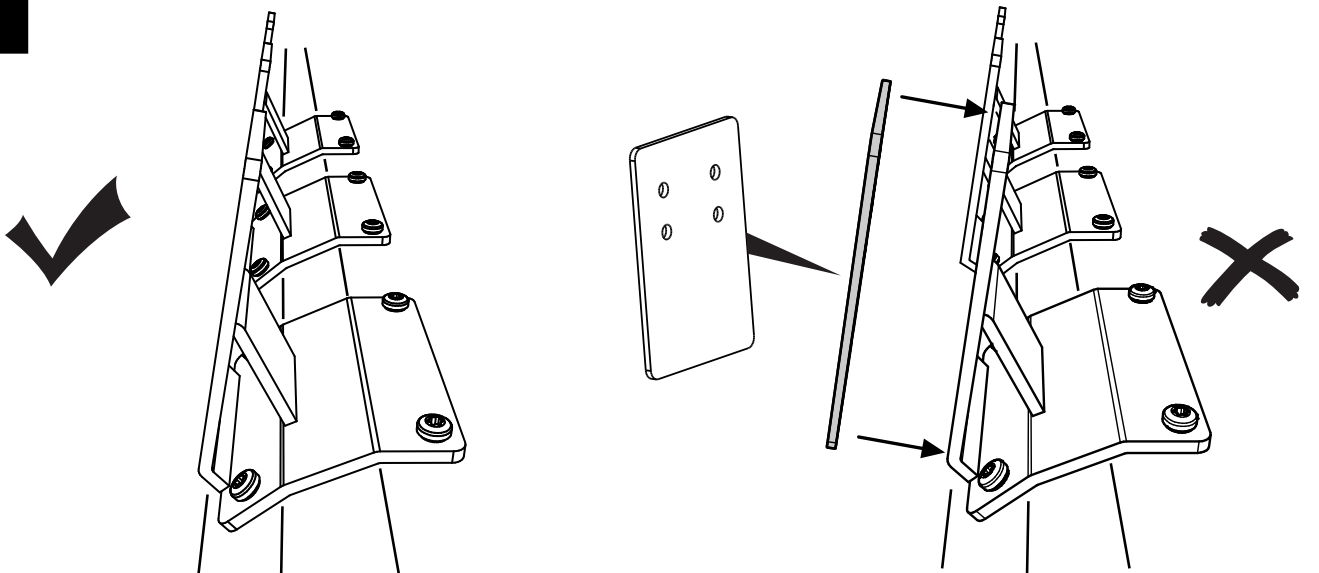

7

A

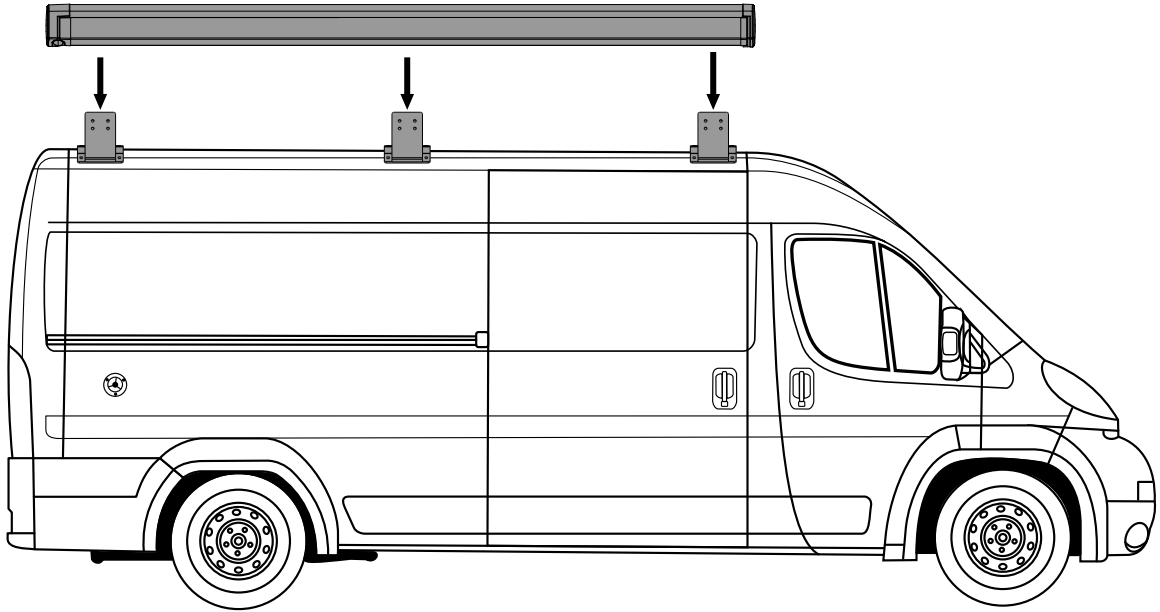

B

